ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DPC29	NAME: JAVIER MULTI PORT CHANDELIER
MATERIAL TYPE: IRON, CRYSTAL	FINISH: ANTIQUE BRASS, CHAMPAGNE
SOCKET TYPE: E12	SOCKET QTY: 3
BULB WATTAGE: LED BULB ONLY 8W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT: 15.4LBS

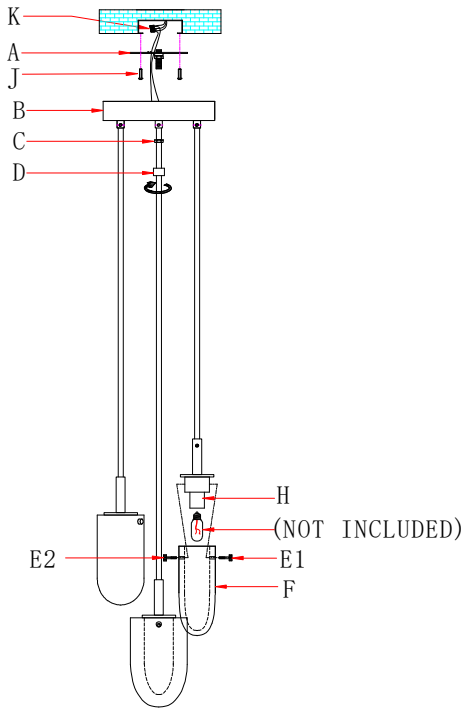

PARTS INCLUDED:

Mounting Plate(A)	Qty:1PC
Canopy(B)	Qty:1PC
Nut(C)	Qty:1PC
Final(D)	Qty:1PC
Thumb screw (E2)	Qty:3PCS
Thumb screw (E1)	Qty:3PCS
Crystal shade (F)	Qty:3PCS
Socket(H)	Qty:3PCS

HARDWARE INCLUDED:

Mounting Screw(J)	Qty:2PCS
Wire Cap(K)	Qty:3PCS
Green Ground Screw	Qty:1PC

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.

2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.

3. Gently pull wiring down from ceiling junction box and allow to hang.

4. Remove the mounting plate(A) from the canopy (B) by loosening the nut(C) and the final(D).

5. Align holes in mounting plate(A) with holes in junction box and attach with two mounting screws(J) Secure screws with a Phillips head screwdriver.

6. Pull the electrical cord of "J box "through the exit hole of the mounting plate(A).

7. Carefully inspect the chandelier's fixture wires.
Neutral fixture wire: Nickel
Hot fixture wire: It has a smooth covering
Ground wire: Bare wire

8. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.

9. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.

10. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

11. Gently tuck the wire cap(K) neatly into the ceiling junction box.

12. Attach the canopy (B) to the mounting plate (A) using the nut(C) and the final(D), and tighten them .

13. Insert 3 LED 8W TYPE T bulbs (not included) into the socket(H).

DO NOT EXCEED SPECIFIED MAX WATTAGE.

14. Place the crystal shade (F) on the socket(H) and secure it with the thumb screws (E1, E2) as shown..

15. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:
Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.