


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DA49005	NAME: Glaze Small Sconce
MATERIAL TYPE: Ceramic, Glass	FINISH: Ivory Stained Crackle, Opal
SOCKET TYPE: G9	SOCKET QTY: 1
BULB WATTAGE: 25 W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 2.2 LBS



FIG.1

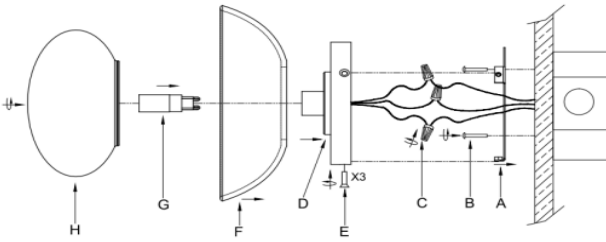

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Position the mounting plate on the wall and mark the location of the mounting holes. Drill the holes in the wall and then insert the plastic anchors.
3. Attach the mounting plate (A) to the wall junction box using the enclosed mounting screws (B) and tighten the screws with a screwdriver.
4. Connect the electrical wires as shown in Fig. 2, make sure that all wire connectors are secured. If your outlet has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw provided. Tuck the wire connections neatly into the outlet box.
5. Attach the back plate (E) to the mounting plate (A) and secure with three flat head screws as per Fig. 1.
6. Install the light bulb (G) into the socket.
7. Attach the ceramic shade (F) to back plate (E) and screw on the glass globe (H) until tight.
8. Restore power to junction box and test fixture. DO NOT EXCEED SPECIFIED MAX WATTAGE.

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc
Back Plate (E)	Qty: 1 Pc
Shade (F)	Qty: 1 Pc
Light Bulb (Not included) (G)	Qty: 1 Pc
Glass Globe (H)	Qty: 1 Pc

HARDWARE INCLUDED:

Mounting Screws (B)


TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

FIG.2

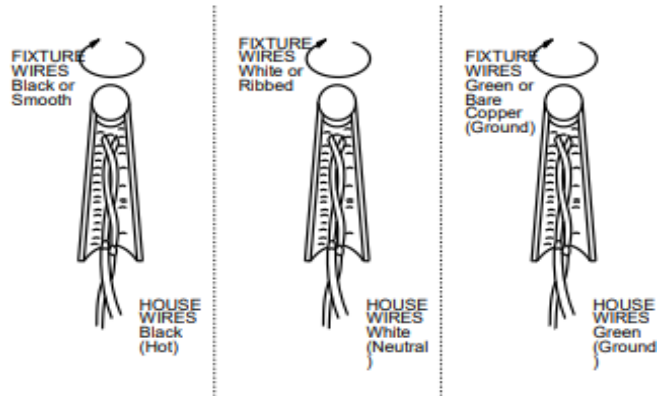

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS