


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: PDC02	NAME: Wayne Lamp
MATERIAL TYPE: Steel	FINISH: Antique Brass
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: 40W/CFL 10W/LED 9W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 10LBS

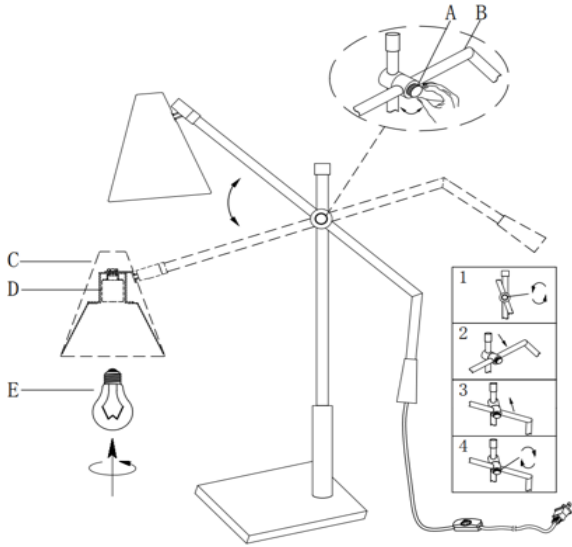

PARTS INCLUDED:

Lock Nut (A)	Qty: 1
Lamp Arm (B)	Qty: 1
Shade (C)	Qty: 1
Socket (D)	Qty: 1
Bulb (not included) (E)	

PRE-ASSEMBLY:

- Remove all parts and hardware from box along with any plastic protecting packaging
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

TO ASSEMBLE:

1. Place the lamp on a flat, stable surface. Loosen the lock nut (A) a little by turning in counterclockwise direction first, then carefully pull the lamp arm (B) gently.
2. Adjust the lamp arm (B) to the angle you desire, then fix the lock nut (A) by tightening in a clockwise direction and be sure to secure.
3. Insert correct bulb (not included) into the socket.

CARE INSTRUCTIONS:

- Clean with soft, dry cloth.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the lamp.

IMPORTANT SAFETY INSTRUCTIONS:

For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other) (For North America Customers Only). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord’s socket. Never alter the plug in any way. This instruction is provided for your safety. It is important that it is read carefully and completely before assembling the fixture. To avoid risk of fire, do not exceed the recommended wattage.

WARNING:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing the bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

For customer service questions call 1-800-338-2150

ARTERIOORS